

# LARRY'S RENTAL<sup>INC</sup>

## HONDA ENGINE START-UP

To start any



follow these simple steps:

- (1) Locate the 'RED ON/OFF' switch and turn to the 'ON' position



- (2) Put the 'GREY PLASTIC LEVER (CHOKE)' to the 'LEFT MOST POSITION' and the 'BLACK PLASTIC LEVER (FUEL)' to the 'RIGHT MOST POSITION'



- (3) Give the engine's pull cord ONE pull



- (4) Put the 'GREY PLASTIC LEVER (CHOKE)' to the 'RIGHT MOST POSITION' and make sure the 'BLACK PLASTIC LEVER (FUEL)' remains to the 'RIGHT MOST POSITION'





HONDA ENGINE START-UP

PAGE (2)

- (5) Give the engine's pull cord ONE pull **if the engine is not already running.**
- (6) The engine should now be running. Before starting any work, increase the engine to maximum speed after it has had sufficient time to warm-up (approximately 5 minutes). This is done by moving the 'TOP GREY METAL LEVER' to the 'LEFT MOST POSITION'



- (7) ENGINE SHUTDOWN: Bring the engine speed down to its lowest setting by moving the 'TOP GREY METAL LEVER' to the 'RIGHT MOST POSITION'. Turn the engine's red 'ON/OFF SWITCH' to the 'OFF' position. Turn the fuel off for transporting by moving the 'BLACK PLASTIC LEVER' to the 'LEFT MOST POSITION'.

**DO NOT PULL THE CORD ON THIS ENGINE WITH THE CHOKE IN THE 'ON' POSITION MORE THAN THREE TIMES!!!**  
**IF YOU DETECT THE SMELL OF GAS OR HAVE PULLED THE CORD ON THIS ENGINE MORE THAN FIVE TIMES, STOP WHAT YOU ARE DOING!!!**  
**CALL US IMMEDIATELY!!!**