

LARRY'S RENTAL^{INC}

HONDA ENGINE START-UP

To start any



follow these simple steps:

- (1) Locate the 'RED ON/OFF' switch and turn to the 'ON' position



- (2) Put the 'GREY PLASTIC LEVER (CHOKE)' to the 'LEFT MOST POSITION' and the 'BLACK PLASTIC LEVER (FUEL)' to the 'RIGHT MOST POSITION'



- (3) Give the engine's pull cord ONE pull



- (4) Put the 'GREY PLASTIC LEVER (CHOKE)' to the 'RIGHT MOST POSITION' and make sure the 'BLACK PLASTIC LEVER (FUEL)' remains to the 'RIGHT MOST POSITION'





HONDA ENGINE START-UP

PAGE (2)

- (5) Give the engine's pull cord ONE pull **if the engine is not already running.**
- (6) The engine should now be running. Before starting any work, increase the engine to maximum speed after it has had sufficient time to warm-up (approximately 5 minutes). This is done by moving the 'TOP GREY METAL LEVER' to the 'LEFT MOST POSITION'



- (7) ENGINE SHUTDOWN: Bring the engine speed down to its lowest setting by moving the 'TOP GREY METAL LEVER' to the 'RIGHT MOST POSITION'. Turn the engine's red 'ON/OFF SWITCH' to the 'OFF' position. Turn the fuel off for transporting by moving the 'BLACK PLASTIC LEVER' to the 'LEFT MOST POSITION'.

DO NOT PULL THE CORD ON THIS ENGINE WITH THE CHOKE IN THE 'ON' POSITION MORE THAN THREE TIMES!!!
IF YOU DETECT THE SMELL OF GAS OR HAVE PULLED THE CORD ON THIS ENGINE MORE THAN FIVE TIMES, STOP WHAT YOU ARE DOING!!!
CALL US IMMEDIATELY!!!